

iVMS-4500 (iOS) Mobile Client Software

User Manual (V4.4)

UD01867B

COPYRIGHT ©2016 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to iVMS-4500 Mobile Client Software.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR

INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Contents

Chapter 1 Introduction	4
1.1 Overview	4
1.2 System Requirements	4
1.3 Conventions	4
Chapter 2 Installing and Uninstalling the Software	5
2.1 Installing the Software	5
2.2 Uninstalling the Software	5
Chapter 3 Running the Software	6
3.1 Region Selection	6
3.2 Password Protection	6
3.3 Interfaces Introduction	7
Chapter 4 Device Management	9
4.1 Adding a Device	9
4.2 Modifying a Device	17
4.3 Deleting a Device	18
Chapter 5 Live View	31
Chapter 6 Remote Playback	42
Chapter 7 Alarm Management	47
Chapter 8 Picture & Video Management	50
Chapter 9 Cloud Service	53
Chapter 10 System Configuration	57
Appendix	61
Version History	61

Chapter 1 Introduction

1.1 Overview

iVMS-4500 (iOS) mobile client software, which is designed for iPhone on the basis of iOS (Version 7.0 and later), can be used to remotely monitor the live video from embedded DVR, NVR, network camera, network speed dome and encoder via wireless network, play back video files, locally store and manage pictures and videos, manage alarm notification and information, control alarm output and realize PTZ control as well.

iVMS-4500 software also provides the Cloud service for managing your Cloud account and the added devices.

With this software installed in your iPhone, you are able to log onto the front-end device via Wi-Fi, 3G or 4G; besides, if there is no public IP available for the device, it's accessible by using a dynamic domain name, or by mapping ports to the public IP of router.

Notes:

- Wi-Fi, 3G or 4G access service must be supported by the iPhone.
- Network traffic charges may be produced during the use of this client software.
 Please refer to the local ISP.

1.2 System Requirements

iOS 7.0 and later (since iPhone 4).

1.3 Conventions

In order to simplify the description, we define the "iVMS-4500 (iOS) mobile client software" as "software" and "DVR, NVR, encoder, network camera, network speed dome" as "device" in the following chapters.

Chapter 2 Installing and Uninstalling the Software

2.1 Installing the Software

Steps:

- 1. Log onto the **App Store**.
- 2. Enter "iVMS-4500" to search the mobile client software.
- 3. Download and install it to your iPhone.
- 4. After having installed the software successfully, you can click to start the software.

2.2 Uninstalling the Software

Click and hold the in the program list until it changes to Click to uninstall the mobile client software.

Chapter 3 Running the Software


After having installed the software successfully, click of to run the software.

3.1 Region Selection

The first time you run the iVMS-4500 software, you should select the region where your device is located. Otherwise, the live view, playback and alarm notification of the devices will fail.

Steps:

1. Click **Select Region** field and select the country from the corresponding continent.

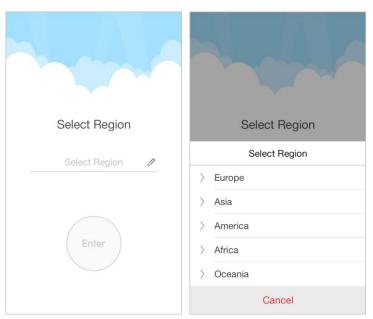

2. Click **Enter** to enter the main page of the software.


Note: If you need to change the selected region after that, you can go to the Configuration page and select the region again.

3.2 Password Protection

With the password protection enabled, only the user that has the password can access the software.

Task 1: Enable Password Protection Steps:

1. Click and select **Configuration** to enter the Configuration interface.

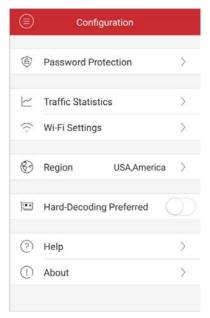

- 2. Click **Password Protection** and then set the switch of **Password Protection** as on to enter the password settings interface.
- 3. Enter the password for the software and confirm it to activate the password protection.

Next time, if you want to run the software after exit, you need to enter the password to log in first.

Task 2: Modify the Password


Click **Password Protection** and then click **Modify Password** and enter corresponding information to change the password.

Task 3: Disable Password Protection Steps:

- 1. Click **Password Protection** and then set the switch of **Password Protection** as off to disable the password protection.
- 2. Enter the password to confirm the settings.

3.3 Interfaces Introduction

The software has seven main functions, including Live View, Remote Playback, Device Management, Alarm Management, Picture & Video Management, Cloud Management and Configuration.

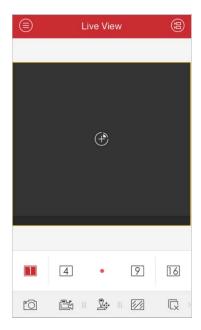

You can click o to activate the main menu.

Description of Main Menu

Menu	Descriptions
Live View	Live view, PTZ control, local recording, alarm outputs
	control, fisheye expansion, etc.
Remote Playback	Play back the video files stored in the device.
Devices	Display device list, add/delete/modify device, view device information, remote configuration, remote controller, etc.
Alarm	Enable alarm notification, manage alarm information and
	view the alarm linkage information.
Picture & Video	Display and manage the local video files and pictures.
Cloud P2P	Register a Cloud account, log into your Cloud and manage
	the devices which support the Cloud service.
	Configure password protection.
Configuration	Check the traffic statistics and configure Wi-Fi settings.
	Select the region.
	Enable hardware decoding for live view or playback.
	View software's version information, help file and new
	features.


Chapter 4 Device Management

4.1 Adding a Device

You need to add a device firstly that all operations such as live view, playback and device management can be accessible.

Note: Before adding a device, you should select the region where your device is located. Otherwise, live view, playback and alarm notification of the device will fail.

Click and select **Devices** to enter the Device Management interface.

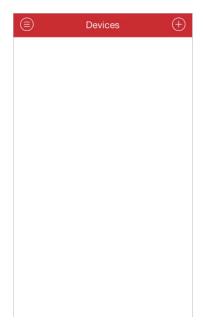

Five ways are available for adding the devices.

Manual Adding

Steps:

1. Click and select Manual Adding.

Alias: Edit a name for the device as desired.

Register Mode: Select the register mode to HiDDNS, IP/Domain, or IP Server.


- HiDDNS: When the device is registered on the HiDDNS server, you need to enter the device domain name registered on the server.
- IP/Domain: You can access the device through fixed IP address or domain name. You need to edit the IP address or domain address and the port of the device.
- IP Server: You can access the device through IP Server. You need to set the IP Server address, and device identifier which is the device name or device serial No..

User Name: Input the user name of the added device.

Password: Input the password of the added device.

Camera No.: The number of the camera(s) under the device can be obtained after the device is successfully added.

2. Click to confirm the settings.

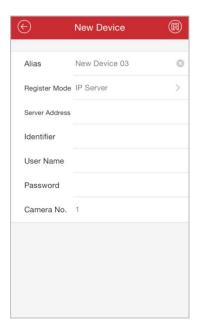


Scanning QR Code for Single Adding or Batch Adding

You can add the single device or multiple devices by scanning the QR code. *Steps:*

- 1. Click and select Scan QR Code.
- 2. Perform the following steps to add single device by scanning the QR code:
 - 1) Use your iPhone to scan the QR code of the device to be added by aligning the QR Code with the scanning frame.

Note: The QR code can be obtained via iVMS-4200 client software or the local menu of the device.

Device Local Menu: Manu -> Maintenance -> Device Info.

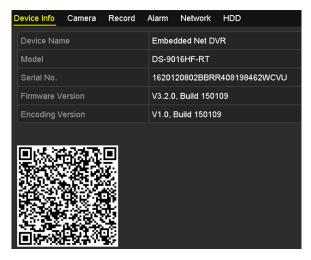

• iVMS-4200 (V2.3.0.4 or above): In the Device Management module, select Server tab, click to select a device and click **QR Code** to pop up the QR code window of the device.




- 2) Select the identified device(s) and click Add.
- 3. Perform the following steps to import the devices in batch:
 - 1) You can use your iPhone to scan the QR code picture containing multiple devices information by aligning the QR Code with the scanning frame.

 Or you can click and select the QR code picture from the phone's album. The QR code will be scanned automatically.



Note: The multiple devices' QR code picture can be generated in the Generate QR Code way. For details, refer to *Generating QR Code* in this section.


2) The scanning result will display.

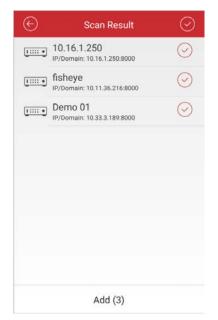


3) Select the devices to add and click **Add** to confirm. You can click ot select all the devices in the scan result list to add.

> Wi-Fi Configuration

- 1. Click and select Wi-Fi Configuration.
- 2. Input the device serial No. (9-bit), or click in and use your iPhone to scan the serial No. on the device label by aligning the QR Code or Barcode with the scanning frame.

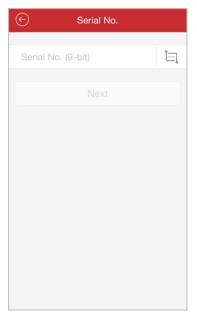

3. Click **Next** and input the password (if required) of the Wi-Fi network that your iPhone connects to.

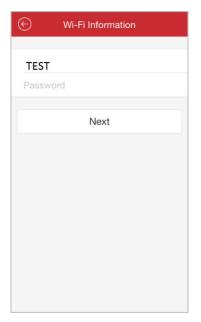

- 4. Click **Next** to enter the Before You Start page. Follow the hints on the page to properly place and set the device to be added.
- 5. Click **Next** and the device starts connecting to the Wi-Fi network.




- 6. Set the following parameters after the device is connected to the Wi-Fi network. The IP address and port No. can be automatically obtained.
 - Alias: Edit a name for the device as desired.
 - User Name: Input the user name of the added device.
 - Password: Input the password of the added device.
 - Camera No.: The number of the camera(s) under the device can be obtained after the device is successfully added.
- 7. Click to add the device.

> Online Device Adding

- 1. Click and select Online Device.
- 2. The online devices in the same local area network with the iPhone will be listed. Select the devices to add from the list.

Notes:


- Make sure the device's Multicast Discovery function is enabled so that the online network camera can be automatically detected via private multicast protocol in the LAN. For details, refer to *User Manual* of network camera.
- For the inactive device, you need to create the password for it before you can add the device properly.

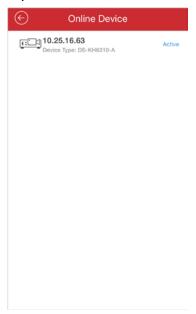


3. Click the device and you can view the online device details including device information and network information.



- 4. Click to edit the network information.
 - 1) Change the device IP address to the same subnet with your iPhone by either modifying the IP address manually or setting the switch of **DHCP** as on.

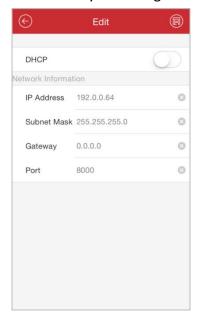

- 2) Click and input the admin password of the device to save the settings.
- 5. Click Add to open the New Device interface.

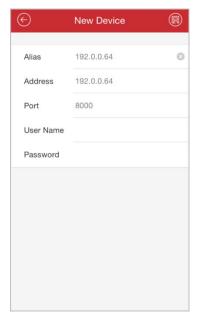


- 1) Input the required information.
 - Alias: Edit a name for the device as desired.
 - User Name: Input the user name of the added device.
 - Password: Input the password of the added device.
- 2) Click (to add the device.

Generating QR Code

You can export the information of the selected added devices to a QR code picture. **Steps:**

- 1. In the Device Management interface, click and select **Generate QR Code**.
- 2. Select the devices to export, and then click **Generate QR Code**. **Note:** Up to 30 devices can be selected for generating QR code.

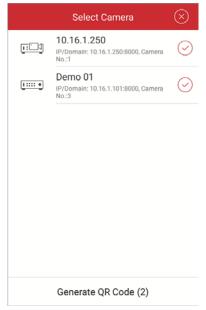


You can click to exit the Generate QR Code mode.

- 3. The QR code containing the devices information will be generated. You can save the QR code picture to you iPhone album.
- 4. You can scan the generated QR code to add the devices in batch. For details, refer to *Scanning QR Code for Single Adding or Batch Adding* in this section.

Notes:

- If the device is successfully added, the software can obtain its camera information.
- Up to 256 devices can be added.
- You can click Start Live View to live view the newly added device. Please refer to Chapter 5 for detailed operation about live view.

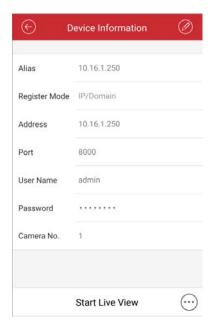

Click to return to the Device Management interface. The successfully added new device will be displayed in the Device Management interface.

Password Strength

When the device is successfully added, the software judges the password strength automatically. If you use weak or risky password which can be easily guessed or cracked, the password security displays. In this case, we highly recommend you to use a strong password to ensure your data security. A strong password ranges from 8 to 16 characters, and must contain at least three of the following categories: numbers, lowercases, uppercases and special characters.

Activating the Device

For manual adding and online device adding, if the device to be added has not been activated yet, a window will pop up to ask you activate the device. Click **Confirm** in the window to activate the device.

Note: You must activate the device before you can properly access to it. **Steps:**

- 1) Create a password for the admin account of the device and confirm the password. The software will judge password strength automatically, and we highly recommend you to use a strong password to ensure your data security. A strong password ranges from 8 to 16 characters, and must contain at least three of the following categories: number, lowercase, uppercase and special character.
- 2) Click Confirm to activate the device.


4.2 Modifying a Device

Steps:

1. In the Device Management interface, select a device and click the device item to

view its parameters.

2. Click and then you can modify the parameters of the device according to actual needs.

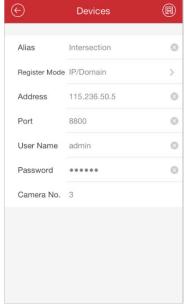

- 3. Click at to save the modification.
- 4. Click to return to the Device Management interface.

4.3 Deleting a Device

In the Device Management interface, select a device and slide the item to access the **Delete** button. Click **Delete** to remove the selected device.



4.4 Remote Configuration

After adding the device, you can set the parameters of the device including basic information, time settings, recording schedule, etc..

Note: The remote configuration requires iOS 8.0 or higher version.


Steps:

1. In the Device Information page, click on and select **Remote Configuration**.




2. The Remote Configuration page is shown as follows.

Note: The parameters configurable in Remote Configuration vary according to the device type.

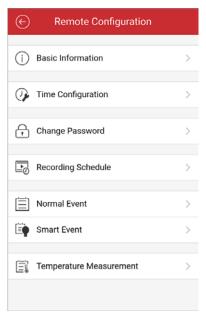

3. Refer to the following table for the description of the remote configuration.

Icon	Name	Description
j	Basic Information	View basic information of the device such as device
		name, device No., model, serial No., etc
	Time Configuration	Select the time zone and set the time synchronization
Time Configu	Time Configuration	mode.
•	Change Password	Change the password of the device.
	Recording Schedule	Set the recording schedule for the channels of the device.
	Normal Event	Enable the normal event such as motion detection, video
		loss, video tampering detection, etc
Ē	Smart Event	Enable the smart event such as audio exception
		detection, face detection, line crossing detection, etc

 

4.4.1 Basic Information

You can view the basic information of the device such as device name, device No., model, serial No., etc.. You can edit the device name and No. as desired.

Steps:

1. Click **Basic Information** to enter the following page:




- 2. The software will get the device basic parameters including device name, No., model, serial No., version, etc..
- 3. You can click to modify the device name and device No. and then click to save the changes.

4.4.2 Time Configuration

You can select the time zone and set the time synchronization mode as manual or NTP mode.

Steps:

1. Click **Time Configuration** to enter the following page:

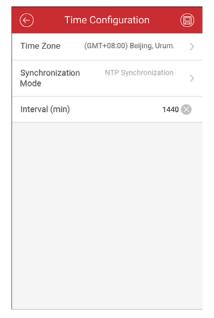


- 2. You can select the time zone in which the device locates and the device time will be adjusted automatically.
- 3. Select the Time Synchronization Mode as NTP Synchronization or Manual Synchronization mode.



 For NTP Synchronization: You are required to set the interval for synchronizing the device time with the NTP server. For setting the NTP server details, please refer to the User Manual of the device.



• For Manual Synchronization: You can click Synchronize with Phone button to synchronize the device time with the system time of the iPhone.

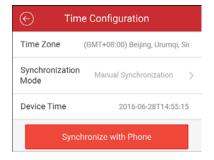


4. Click (a) to save the changes.

4.4.3 Change Password

You can change the password of the device.

Steps:

1. Click **Change Password** to enter the following page:

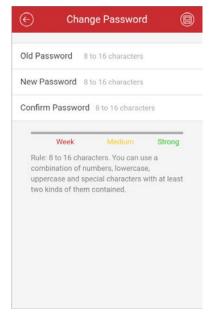

2. Input the old password of the device, and then input the new password and confirm password.

The software will judge password strength automatically, and we highly recommend you to use a strong password to ensure your data security.



STRONG PASSWORD RECOMMENDED— We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

3. Click is to save the changes.


4.4.4 Recording Schedule

You can set the recording schedule for the channels of the device.


Steps:

Click Recording Schedule to enter the Recording Schedule page.
 If the device has multiple channels, you can select the channel to set the


recording schedule.

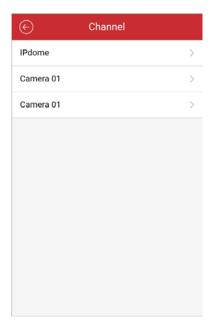


2. You can switch the to set it as to enable the recording schedule of the channel.

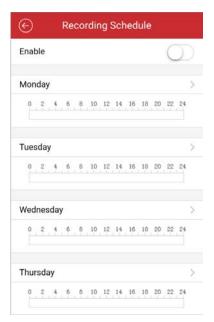

3. Click the day in a week to set the schedule in the following page. Here we take Monday as an example.

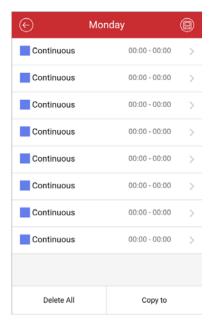

1) Up to eight time periods can be configured in one day's schedule. Click the time period to set the recording type, start time, and end time.

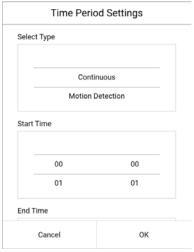


Different recording types are marked in different color.

- Continuous: The video will be recorded automatically according to the time of the schedule.
- Motion Detection: The video will be recorded when the motion is detected.
- Alarm: The video will be recorded when the alarm is triggered via the external alarm input channels.
- Motion Detection or Alarm: The video will be recorded when the external alarm is triggered or the motion is detected.
- Motion Detection and Alarm: The video will be recorded when the motion and alarm are triggered at the same time.
- **Event:** The video will be recorded when any event is detected.


Note: You can also set the recording type as detailed event type, which should be supported by the device. For details, please refer to the User Manual of the device.

- 2) Click **OK** to save the settings of the time period on Monday.
- 3) Perform step 1) to 2) to set other time periods on Monday.

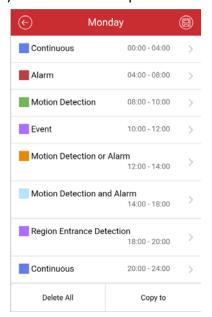


Note: Up to 8 time periods can be configured for each day. And the time periods cannot be overlapped with each other.

4) (Optional) You can click **Copy to** to copy all the time periods settings on Monday to the other dates.

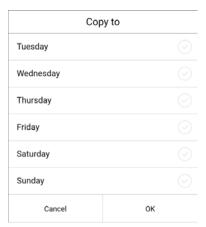

You can click **Delete All** to clear all the configured time periods on Monday.

5) Click **(a)** to save the settings.

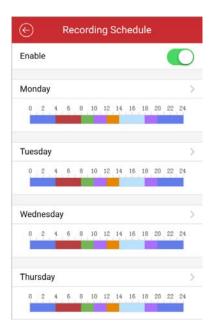


4.4.5 Normal Event


You can enable the normal event such as motion detection, video tampering alarm, video loss alarm, for the channels of the device.

Note: The supported event types of Normal Event vary according to different devices. **Steps:**

Click Normal Event to enter the Normal Event page.
 If the device has multiple channels, you can select the channel according to actual needs.

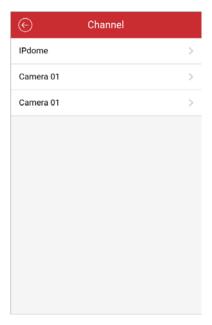

2. You can switch the to set it as to enable the function of normal event.

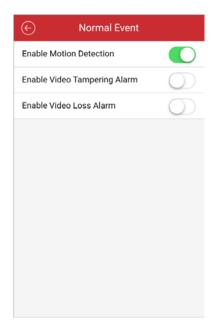


4.4.6 Smart Event


You can enable the smart event which is supported by the mobile client software, such as audio exception detection, face detection, intrusion detection, etc., for the channels of the device.

Note: The supported event types of Smart Event vary according to different devices. **Steps:**

Click Smart Event to enter the Smart Event page.
 If the device has multiple channels, you can select the channel according to actual needs.

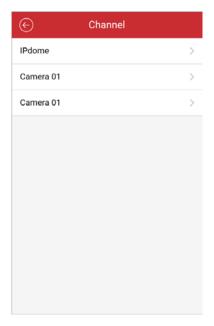

2. You can switch the to set it as to enable the function of smart event.

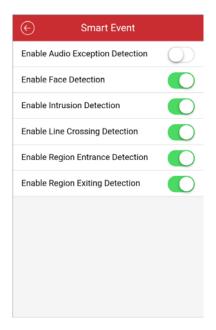


4.4.7 Temperature Measurement

You can enable the temperature measurement function for the thermal camera.


Note: This function is only available to the thermal camera.

Steps:

1. Click **Temperature Measurement** to enter the Temperature Measurement page. If the device has multiple channels, you can select the channel according to actual needs.

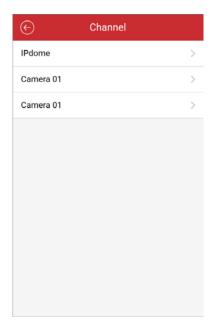

2. You can switch the to set it as to enable the function of temperature measurement.

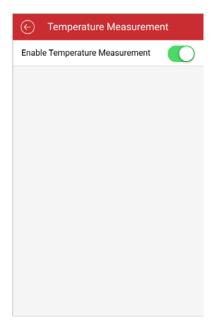

4.5 Remote Controller

You can operate the device's local menu via the mobile client.

Note: The remote controller function is supported when iPhone connected with Wi-Fi network, and the network latency should be less than 200ms.

Steps:

1. In the Device Information page, click on and select **Remote Controller** to enter the following interface.



- 2. You can slide on the phone screen to perform operations on the device local menu such as moving up, down, left, and right.

 Tap the screen to confirm.
- 3. Click to cancel and return to the previous menu of the device.


4. You can click is to open the main menu of the device.

Chapter 5 Live View

After the device is successfully added, you can view live video from the devices, manage the alarm output of the device, control PTZ movement, and perform fisheye expansion as well.

Note: The alarm output and PTZ control should be supported by the added device.

Click and select **Live View** to enter the Live View interface. The screen will be displayed in 4-division mode by default.

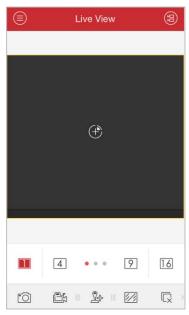

Icon	Description
	Go to the Camera List interface.
1 4 9 16	1/4/9/16-window division.
(1)	Select a camera for live view.
	Capture picture of the selected live view window.
Ēħ	Record the video of the selected live view window.
<u>\$</u> \$	PTZ control panel.
6/9	Image quality panel.
$\overline{\mathbb{Q}}$	Stop all the live view.
	Audio control.
©	Two-way audio.
2	Alarm output control panel.
(+)	Digital zoom.
	Fisheye expansion.

Note: You can slide the icon toolbar to show the hidden icons.

Start Live View

Steps:


1. Click to enter the Camera List interface. Click a device node to list all the cameras under it. (Optional) You can also click to enter the Camera List interface and select one camera for live view.

Note: The name of the camera under the device is obtained from the device.

2. Check checkbox in the device item to select all the cameras under it, or check checkbox in the camera item to select the specific camera as desired.

Notes:

- You can slide the camera list downwards to refresh the device status.
- If the channel-zero is supported by the device and it has been configured, you
 can select to live view by channel-zero.
- Up to 32 cameras can be selected for live viewing at the same time. You can slide the display window to view more cameras.

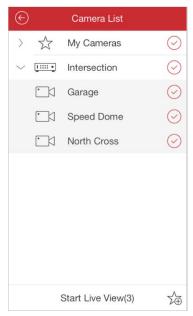

3. Click **Start Live View** to start live view of the selected camera(s). Or you can click to return to the Live View interface.

Note: If the camera is live viewed for the first time, it plays the live video at sub-stream if it supports sub-stream, otherwise it plays at main stream; if not, the camera plays at the stream type of the last time.



Favorites Configuration


You can add the commonly used camera(s) to the favorites so that you can access the camera(s) conveniently.

Steps:

- 1. Perform the Step 1 and Step 2 of Start Live View to select the camera(s).
- 2. Click to add the camera(s) to the Favorites.
- 3. In the pop-up dialog box, enter the name for the favorites.
- 4. Click **Confirm** to save the settings.

Note: Up to 32 favorites can be added.


The successfully added favorites will be shown in the device list area.

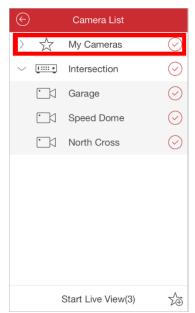

If you want to delete the favorites, slide it to access the **Delete** button. Click **Delete** to remove the selected device.

Window Division

You can click 1/4/9/16 to set the window division as desired. When there are multiple pages of playing windows, you can slide the screen to go to the next or previous page.

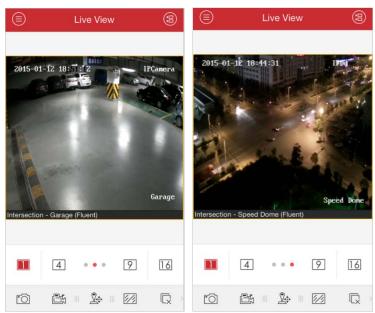

You can drag and move the window to adjust the window sequence. You can double-click the live view window to display the camera in 1-division mode and double-click again to restore.

Record & Capture

In live view mode, select a live viewing window and click the \Box to record the video of it, or click the \Box to capture a picture of it.

The videos and pictures can be viewed and managed in the Picture & Video Management interface (refer to *Chapter 8*).

Note: It is recommended not to record 4 cameras simultaneously during live view due to the performance limit of the iPhone.

PTZ Control

In live view mode, select a playing window and click to activate PTZ control panel, and the changes to .

Note: The PTZ control should be supported by the added device.

You can slide on the live view window to realize the pan left/right and tilt up/down movements. You can also pinch two fingers together to zoom out or spread them apart to zoom in the live view.



Icon Description

U Start/stop the auto-scan.

Zoom control: Zoom+/ Zoom-

Focus control: Focus+/ Focus-

Set, delete and call the preset.

Setting a Preset

Steps:

- 1. In the PTZ control mode, slide on the live view window to move the camera to the desired scene.
- 2. Click to access the following dialog box.



3. Slide the number area to set the preset No..

Note: The preset No. should be between 1 and 256.

4. Click **Set** to finish the preset settings. You can click **Delete** to delete the preset.

Calling a Preset

For the programmed preset, you can slide to set the preset No. in the dialog box and click **Call** to call it.

After completion of PTZ control, click 🏖 to hide the PTZ control panel.

Image Quality

There are two defined image quality types provided, including Clear and Fluent. And


Notes:

- If you change the image quality, the live view and recording of the device may be affected due to the new settings.
- For Cloud P2P device, you can set the image quality as **Clear** or **Fluent**.
- In multi-division live view, you can only select the defined image quality as
 Fluent. Or you can customize the image quality and the stream type can only be
 Sub Stream.

Customize the Image Quality

Steps:

1. Click **Custom** to activate the customized panel shown below.

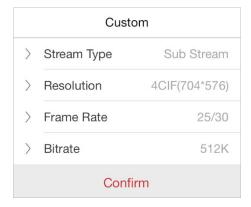

- 2. Configure the parameters according to actual needs, including Stream Type, Resolution, Frame Rate and Bitrate.
- 3. Click **Confirm** to save the settings.

Note: The live view effect is related to the performance of your network and phone hardware. If the live view is not fluent or the screen appears blurred, please reduce the resolution, frame rate and bitrate of the camera in Custom mode, or set the image quality as Fluent mode.

The following table shows the recommended frame rate and bitrate configuration for different resolution at H.264, H.264+ and H.265 video compression by using iPad Air (iOS 9).


- 1-						
Resolution	1-ch	2-ch	4-ch	Recommended Configuration		
H.264 (Hardware Decoding)						
1080P	√	√	√	Frame rate: 25fps; Bit rate: 4Mbps		
720P	√	√	√	Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	√	√	√	Frame rate: 25fps; Bit rate: 512Kbps		
H.264 (Software Decoding)						
720P	√	√		Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	√	√	√	Frame rate: 25fps; Bit rate: 512Kbps		
H.264+ (Hardware Decoding)						
1080P	√	√	√	Frame rate: 25fps; Bit rate: 4Mbps		

720P	√	√	√	Frame rate: 25fps; Bit rate: 2Mbps	
H.264+ (Software Decoding)					
720P	√	√	Frame rate: 25fps; Bit rate: 2Mbps		
H.265 (Software Decoding. Hardware decoding is not supported.)					
1080P	√			Frame rate: 25fps; Bit rate: 2Mbps	
720P	√	√		Frame rate: 25fps; Bit rate: 1Mbps	
4CIF	√	√	√	Frame rate: 25fps; Bit rate: 256Kbps	

Stop Live View

During the live view, you can click (it changes to) to stop live view of all cameras. And you can also click to recover the previous live view. Or you can perform the following steps to stop live view of the specific camera. **Steps:**

- 1. Click and hold the live view window.
- 2. Drag the window upwards, and the 🗐 shows on the top of the window.
- 3. Drag the window to the until it changes to and then release the window.

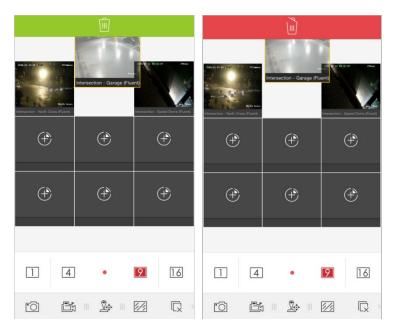

Audio Control

You can control the audio of the selected channel.

Select the channel and slide the icon toolbar to access the hidden icons.

Click of the enable the audio of the selected channel.

Notes:

- The audio is enabled when the live view starts by default.
- When the audio control of the channel is enabled, the two-way audio function is not supported.

Two-way Audio

Two-way audio function enables the voice talk of the devices. You can get not only

the live video but also the real-time audio from the device.

Click for to start the two-way audio with the device in live view.

Notes:

• For NVR or DVR device, you can select the device itself, or the IP cameras to start two-way audio.

The supported audio format of two-way audio for IP Camera: G.722.1, G.711alaw, G.711ulaw, MP2L2, G.726, and AAC.

The supported audio format of two-way audio for DVR/NVR: G.711alaw and G.711ulaw.

 When the two-way audio of the channel is enabled, the audio control function is not supported.



Alarm Output Control

You can control the alarm outputs of the added device by the software.

Note: The alarm output should be supported by the device.

Steps:

- 1. Slide the icon toolbar to access the hidden icons.
- 2. Click (square) to activate the alarm output control panel.



3. Select an alarm output and click it to set it as to enable this alarm output. You can also click the enabled alarm output to set it as disable it.

Digital Zoom

You can realize the digital zoom during live view.

- 1. Click to select a playing window.
- 2. Slide the icon toolbar to access the hidden icons.
- 3. Click (d) and the selected window will be display in 1-division mode.
- 4. Spread two fingers apart to zoom in or pinch them together to zoom out the live

view. Or you can double-click on the live view image to realize digital zoom.

Fisheye Expansion

The live video of the fisheye camera can be played in fisheye expansion mode.

Note: This fisheye expansion function should be supported by the device.

Click on the fisheye expansion panel.



Icon Description

- Dual-180° panorama view for ceiling mounting and table mounting.
- 360° panorama view for ceiling mounting and table mounting.
- Panorama view for wall mounting.
- PTZ view. You can slide on the live view window to realize the pan left/right
- and tilt up/down movements. You can also pinch two fingers together to zoom out or spread them apart to zoom in the live view.

You can select the expansion mode according to the mounting type of the device.

Live View for Thermal Camera

During live view of thermal camera, the fire source information, OSD, temperature, ship detection frame, and other information will be displayed on the live view image if configured and detected.

Note: For configuring the display of fire source, OSD, temperature, and ship if detected, please refer to the *User Manual* of the thermal camera.



Full-Screen Live View

During live view, you can rotate the iPhone to enter the full-screen mode.

Note: Please release the rotation lock of the iPhone to realize this function. You can touch the screen to activate the control panel after it hides.



lcon	Description
4 9 16	1/4/9/16-window division.
O	Capture picture of the selected live view window.
	Record the video of the selected live view window.
\$ \$	PTZ control panel.
6/3	Image quality panel.
	Stop all the live view.
$(\!\downarrow\!)$	Audio control.
<u>©</u>	Two-way audio.
<u>J@</u>	Alarm output control panel.
\oplus	Digital zoom.
	Fisheye expansion panel.

Chapter 6 Remote Playback

You can search the recorded video files stored in the added device for playback.

Start Playback


Steps:

- 1. Click and select **Remote Playback** to enter the Remote Playback interface.
- 2. Click to display the added device list.

 (Optional) You can also click icon, set the start time and end time and select one camera for playback.
- 3. Set the start time and end time in the **From** and **To** field to define the search condition.
- 4. Select a device node and click to list all the cameras under it.
- 5. Check checkbox in the device item to select all the cameras under it, or check checkbox in the camera item to select the specific camera as desired.


Notes:

- You can slide the camera list downwards to refresh the device status.
- Only the cameras with record during that period can be played back successfully.
- Up to 4 cameras can be selected for remote playback at the same time.

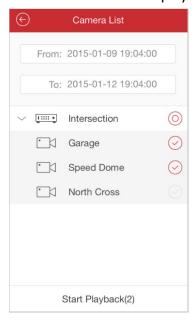

6. Click Start Playback to start playback.

Note: You can drag and move the window to adjust the window sequence. You can double-click the playback window to display the camera in 1-division mode and double-click again to restore.

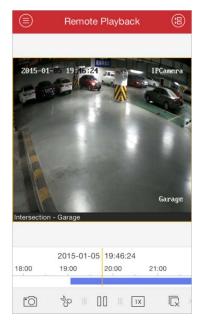

7. You can slide the timeline bar to adjust the playback time.

	2015-01-05	19:46:24	
18:00	19:00	20:00	21:00

Icon Description

- Capture picture of the playback window.
- Clip the playback video.
- Pause the playback.
- Adjust the playback speed.
- Stop the playback.
- Audio control.
- Image quality panel.
- ① Digital zoom.


Note: You can slide the icon toolbar to show the hidden icons.

Stop Playback

You can click to stop the playback.

Or you can perform the following steps to stop the playback.

- 1. Click and hold the playback window.
- 2. Drag the window upwards, and the is shows on the top of the window.
- 3. Drag the window to the until it changes to and then release the window.

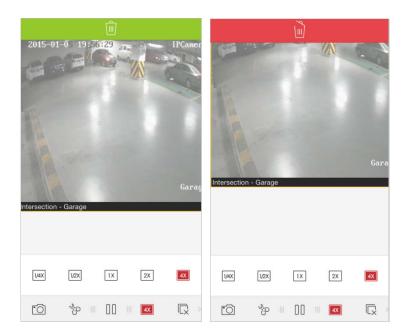

Clip & Capture

During the playback, you can click $^{\circ}$ to clip the playback video, or click $^{\circ}$ to capture pictures of it.

The clipped video and captured pictures can be viewed and managed in the Picture & Video Management interface (refer to *Chapter 8*).

Playback Speed

You can set the playback speed of the video files as 1/16X, 1/8X, 1/4X, 1/2X, 1X, 2X, 4X, 8X, and 16X.

Steps:


- 1. Click to select a playing window.
- 2. Click and click or boto to slow forward or fast forward during playback.

Image Quality

For the device which supports transcoding playback, you can customize the image quality during playback.

Note: This function should be supported by the device.

- 1. Click loactivate the Image Quality panel.
- 2. Click **Custom**, and you can set the resolution, frame rate and bitrate.
- 3. Click **Confirm** to save the settings.

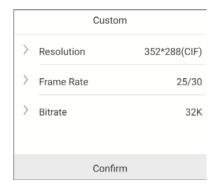

Digital Zoom

You can realize the digital zoom during playback of video files.

Steps:

- 1. Slide the icon toolbar to access the hidden icons.
- 2. Click and then spread two fingers apart to zoom in or pinch them together to zoom out the video. Or you can double-click on the playing video to realize digital zoom.

Remote Playback for Thermal Camera

During remote playback of thermal camera, the fire source information, OSD, temperature, ship detection frame, and other information will be displayed on the playback image if detected.

Note: For configuring the display of fire source, OSD, temperature, and ship if detected, please refer to the *User Manual* of the thermal camera.

Full-Screen Playback

During playback, you can rotate the iPhone to enter the full-screen mode.

Note: Please release the rotation lock of the iPhone to realize this function. You can touch the screen to activate the control panel after it hides.



Icon Description

 $[\bigcirc]$

Capture picture of the playback video.

30

Clip the playback video.

Pause the playback.

Adjust the playback speed.

Stop the playback.
Audio control.

Image quality panel.

Digital zoom.

Chapter 7 Alarm Management


In Alarm Management interface, you can enable alarm notification, manage alarm information, and view the alarm linked video.

Alarm Notification

After setting the alarm notification, the triggered alarm information will be pushed to you iPhone's Notification Center at the first time if you exit the software.

Steps:

- 1. Click and select **Alarm** to enter the Alarm Management interface.
- 2. Click **Set Alarm Notification** to enter the Set Alarm Notification interface.

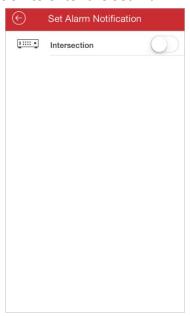

3. Select a device and set the as to enable the alarm notification of the device. In this way, the alarm information can be pushed to your iPhone at the first time.

Notes:


- The device should be armed and support alarm notification.
- The alarm notification setting of the device is only valid to the notification center of the current iPhone.
 - For example, if one device is added to two mobile clients for management, and both clients enable its alarm notifications, and if one client disables the device's alarm notification, then the alarm notification on another client will still remain enabled.
- The device's event linkage method of Notify Surveillance Center should be selected via the iVMS-4200 control client or web browser. For details, please refer to the user manual of the device.
- 4. When you receive a notification, it appears briefly at the top of the screen. You can ignore the notification or click it to address it right away. Otherwise, the

notification displays in the alarm information directly.

Alarm Information

Steps:

1. In the Alarm Management interface, you can view the received alarm information. The unread alarm information number is displayed on the menu icon on the upper-left corner. When there are more than 99 pieces of unread information, the number is 99+.

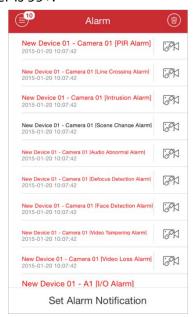

- 2. You can select a piece of alarm information and slide the item to access the **Delete** button. Click **Delete** to delete the selected alarm information.
- 3. If you want to clear all the alarm information, you can click .

Notes:


- Up to 1000 pieces of alarm information can be displayed on the alarm information list.
- The normal alarm supported to be pushed to the software includes: motion detection alarm, video loss alarm, video tampering alarm, sensor alarm, I/O alarm, line crossing detection alarm, intrusion detection alarm, face detection alarm, scene change detection alarm, audio exception alarm, defocus detection alarm and PIR alarm.
- The alarms supported by thermal camera can also be pushed to the software if triggered, including: region entrance alarm, region exiting alarm, fire source detection alarm, ship detection alarm, temperature pre-alarm, temperature alarm, and temperature difference alarm.

Alarm Linkage

- 1. In the Alarm Management interface, select a piece of alarm information and click
- 2. In the pop-up message box, select Live View or Remote Playback to view the live

view or video file of the camera that occurs motion detection, video loss, video tampering, line crossing, intrusion, face detection, scene change detection, audio exception, defocus detection or PIR alarm.

Note: The related video file will be played from 30s before the alarm occurs to 90s after the alarm. E.g., if the motion detection alarm occurred at 11:30:00, then the video file is from 11:29:30 to 11:31:30.

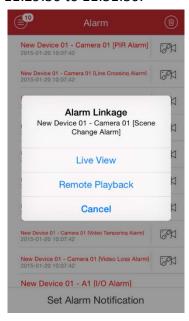

Chapter 8 Picture & Video Management

In Picture and Video Management interface, you can view and manage the local video files and pictures that you manually record (clip) and capture in Live View and Remote Playback interface. You can also export the pictures to your photo album of your iPhone, or send the pictures and videos to your email.

The pictures and videos are dispalyed by date.

If you want to export pictures to your photo album, please perform the following steps.

Steps:

- 1. Click and then select the pictures for exporting.
- 2. Click and select .
- 3. Click **Confirm** to export the selected pictures to your photo album.

If you want to send the pictures and videos to your email, please follow the steps.

Steps:

- 1. Click and then select the pictures and videos for sending.
- Click
 ☐ and select ☐.
- 3. On the pop-up email interface, edit the receiver's account and email subject, and click **Send** to send the pictures and videos to the designate email account.

If you want to delete the pictures and videos in batch, perform the steps below.

Steps:

- 1. You can click and then select the pictures and videos you want to delete.
- 2. Click to delete the selected file(s). Or you can click to cancel.

Picture Management

- 1. Click and select **Picture & Video** to enter the Picture & Video Management interface.
- 2. Click a picture and the picture displays in full screen. You can click if you want to delete it, and click to export the picture to your photo album or send it to your email.




- 3. You can pinch two fingers together to zoom out or spread them apart to zoom in the picture. Or you can double-click on the picture to realize digital zoom. You can also slide to pan the picture under zoom-in mode.
- 4. Click to back to the Picture & Video Management interface.

Video Management

Steps:

1. In the Picture & Video Management interface, click a video and the video shows in full screen. You can click if you want to delete it, and click to send it to your email.

Note: Exporting the clipped video to your photo album is not supported.

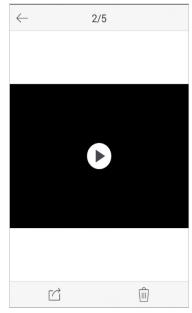

- 2. Click to play it. You can slide the time line bar to adjust the playback time.
 - Capture a picture of the playback video.
 - Pause the playback.

Audio control.




- 3. You can also rotate the iPhone to enter the full-screen mode.
 - Note: Please release the rotation lock of the iPhone to realize this function.
- 4. For playing the recorded (clipped) video of thermal camera, the fire source information, OSD, temperature, ship detection frame, and other information will be displayed on the video image if detected.

Note: For configuring the display of fire source, OSD, temperature, and ship if detected, please refer to the User Manual of the thermal camera.

Chapter 9 Cloud Service

The software also supports to register a Cloud account, log into your Cloud and manage the devices which support the Cloud service.

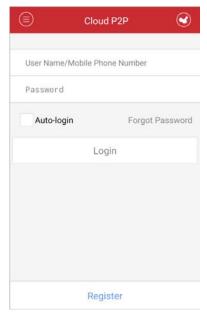

Register an Account

If you do not have a Cloud account, you can register one.


Steps:

- 1. Click and select Cloud P2P to enter the Cloud interface.
- 2. Click or at the top right corner of the interface and select the service area.

Note: Please select the service area according to your location.

- 3. Click **Register** to enter the account registration interface.
 - If you select 中国服务区: Enter your mobile phone number, click **Get Verification**Code and enter the verification code received by your mobile phone.
 - **If you select International:** Enter your email account and the picture verification code. Click **Get Verification Code** and enter the verification code received by your email.

Note: If the picture verification code is not clear, you can click **Refresh** to get a new one.

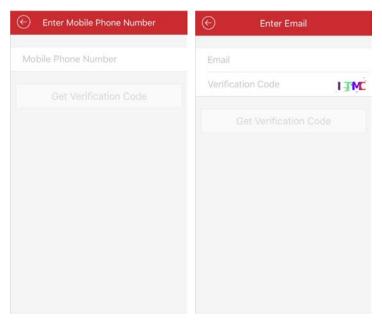

4. Configure the user name and password for your Cloud account to complete the registration.

Login

Steps:

- 1. Click or at the top right corner of the interface and select the service area.
- 2. Enter the user name, email account or mobile phone, input the password and click **Login**.

Notes:


- You can check Auto-login checkbox to remember the user name and password log into the Cloud automatically.
- If the Access Configuration function is enabled, only the verified and linked mobile devices can login the account, and you are required to input the verification code for the first time login.
- If you forget your password, click Forgot Password to verify your account and reset your password.

Device Management

1. Click and use your iPhone to scan the serial No. on the label of your device by aligning the QR Code with the scanning frame. Or you can click and enter the serial No. (9-bit) of the device and click **Search** to search the device.

Notes:

- Only the device that supports the Cloud service can be added.
- The device can only be added to one Cloud account.

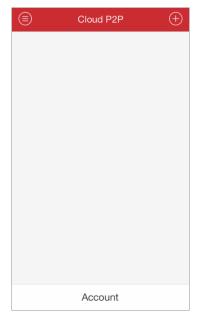


- 2. The successfully added device will list on the Device Management interface and you can click **Start Live View** to view the live video of the device. **Note:** After adding the Cloud P2P device to the software, when starting live view or playback for the first time, you are required to input the verification code which can be obtained on the label of the device.
- 3. On the Devices interface, select a device and slide the item to access the **Delete** button. Click **Delete** to remove the selected device from your Cloud account.

Account Management

Click **Account** and you can manage your Cloud account. Click **Modify Password** to change the password.


Set the as to enable the auto-login function.

To log out of Cloud, you can click **Logout**.

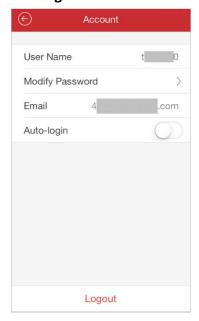

Chapter 10 System Configuration


In the Configuration interface, you can configure password protection and email feedback; check the traffic statistics, configure Wi-Fi settings and select the region; enable the hardware decoding; and view software's version information, help file and new features.

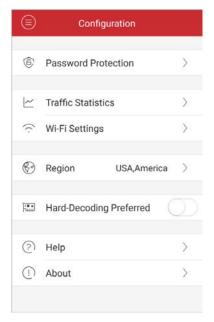

Check Traffic Statistics

The network traffic consumed during live view and remote playback can be checked. You can check the mobile network traffic and Wi-Fi network traffic separately. **Steps:**

1. Click and select **Configuration** to enter the Configuration interface.

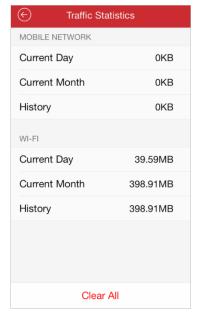

2. Click **Traffic Statistics** to enter the Traffic Statistics interface. The recorded traffic data lists.

Mobile Network: Refer to the cellular data consumed during live view and remote playback.

Wi-Fi: Refer to the Wi-Fi data consumed during live view and remote playback.

Current Day: The traffic data consumed today.

Current Month: The traffic data consumed this month.

History: The traffic data consumed since you started using the software.

3. (Optional) You can click Clear All to empty the data.

Wi-Fi Settings

The software provides the function of generating the QR code of Wi-Fi network. The network camera can scan the QR code to connect to the Wi-Fi network conveniently. **Steps:**

- 1. Click and select **Configuration** to enter the Configuration interface.
- 2. Click **Wi-Fi Settings** to enter the Wi-Fi Settings interface.



3. Enter the Wi-Fi Name (known as SSID) and password of the Wi-Fi network, select the encryption type which should be the same as the settings of the router, and click **Generate** to generate a QR code for the Wi-Fi network.

Note: If you select **NONE** as the encryption type, the password for the Wi-Fi is not required.

4. The network camera can connect to this network by scanning the QR code.

Notes:

- This function should be supported by the network camera.
- For detailed operation of the camera, please refer to the *User Manual* of the network camera.


Region

You can change the region where your device is located.

Steps:

- 1. Click and select **Configuration** to enter the Configuration interface.
- 2. Click **Region** to enter the Region interface.
- 3. Select the country from the corresponding continent.

Note: There will pop up a hint box after you select the region. Make sure that you select the region where the device is located, and then click **Confirm**.

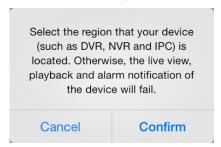

Hardward Decoding

Hardware Decoding can provide better decoding performance and lower CPU usage when playing the HD videos during live view or playback.


You can switch the of **Hard-Decoding Preferred** to set it as to enable decoding by hardware for live view and playback.

Notes:

- The Hardware Decoding requires iOS 8.0 or higher version; otherwise this option will not be shown.
- For hardware decoding, it supports resolutions of 704*576, 704*480, 640*480, 1024*768, 1280*720, 1280*960, 1920*1080, 2048*1536, and 2560*1920. For other resolutions, it will switch to software decoding.
- For H.265 video compression, the hardware decoding is not supported.
- The hardware decoding function should be supported by the device. If not, it will adopt software decoding by default.

New Features and Help

- 1. Click and select Configuration to enter the Configuration interface.
- 2. Click **About** to enter the About interface.
- 3. In the About interface, click **New Features** to view the new features of the software.

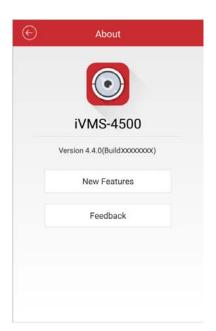

4. In the Configuration interface, click **Help** and you can enter the Help interface. You can view the help file of the software.

Feedback

If there is any problem or suggestion when you use the software, please feel free to send emails to us by clicking **Feedback** in the About interface. Our technical engineers will handle your problems and suggestions as soon as possible.

Appendix

Version History

V4.4

Added New Features:

- 1. Support adding thermal camera for general functions such as live view, PTZ control, playback, capture, recording, alarm notification, etc..
- 2. Support displaying fire source information, OSD, temperature, ship detection frame, and other information on the live view image, remote playback, and local playback for thermal camera.
- 3. In addition to the normal alarm types, the alarms supported by thermal device (such as fire source detection, ship detection, etc.) can also be pushed to the notification center.
- 4. Support exporting devices in batch by generating the QR code and you can save the QR code picture to the phone.
 - Support importing devices in batch by scanning the QR code picture generated above from the phone album.
- 5. Support remote configuration to configure the device parameters including basic information, time, password, recording schedule, normal and smart event, and other settings.
- 6. Support remote controller function to operate the device menu.
- 7. Provide new types of playback speed as 1/16X, 1/8X, 8X and 16X.

V4.3

Added New Features:

- 1. Upgraded encryption type.
- 2. Up to 32 cameras can be selected for live viewing at the same time.
- 3. Support fisheye expansion in live view.
- 4. For DVR or NVR device, you can select the device itself, or the IP cameras to start two-way audio.
- 5. Support AAC and MP2L2 audio format for two-way audio.
- 6. In multi-division live view, the stream type can only be Sub Stream, so that the live view can be more fluent.
- 7. Supports transcoding playback and customizing the image quality during playback including resolution, frame rate and bitrate.

V4.2.2

Added New Features:

- 1. Support H.265 and H.264+ video encoding formats.
- 2. iOS 9 is compatible.

V4.2

Added New Features:

1. You can search and add the online device in the same local area network with the iPhone and edit its network parameters.

- 2. Provide hardware decoding for live view and playback.
- You can adjust the image quality types including Clear and Fluent for Cloud P2P device during live view according to the performance of your network and phone hardware.

V4.1

Added New Features:

- 1. Provide region selection for the first time you run the iVMS-4500 software. You can also change the region in Configuration page.
- 2. You can set the Wi-Fi network for the device and add it automatically by adding or scanning the device serial No..

V4.0

Added New Features:

- 1. Newly designed UI to provide a new experience and the convenient operation.
- 2. Provide 1, 4, 9, 16-window division mode for live viewing up to 16 cameras at the same time.
- 3. Provide 4-window division modes for remotely playing back the video files of up to 4 cameras at the same time.
- 4. Simplify the image quality to Clear, Fluent and Custom.
- 5. The speed of the remote playback can be set as 1/4X, 1/2X, 1X, 2X and 4X. You can select the playback speed as desired.
- 6. During multi-window division mode, you can drag and move the window to adjust the window sequence.
- 7. You can add the device by scanning the QR code of the device. The QR code can be obtained via iVMS-4200 client software or the local memu of the device.
- 8. The software will not remember the Wi-Fi information to avoid safety problem.

V3.4

Added New Features:

- 1. The captured pictures and clipped video during live view and playback can be sent to your email.
- 2. The following alarm can also be pushed to the software, includes line crossing, intrusion, face detection, scene change detection, audio exception, defocus detection and PIR alarm.
- 3. Provide Cloud service to manage your Cloud account and devices.
- 4. Check the consumed network traffic statistics during live view and playback.
- 5. Support generating QR code for Wi-Fi network.

V3.3

Added New Features:

- 1. The captured pictures during live view and playback can be exported to your photo album directly.
- 2. Provide multi-language GUI. Added languages include Estonian, Japanese, Korean, Russian, Thai, Traditional Chinese and Turkish.

V3.2

Added New Features:

- 1. Support alarm notification and information management.
- 2. Local storage and management for picture and video.
- 3. Support local recording during live view and playback mode.
- 4. Double-click to realize digital zoom of live view, remote playback and captured picture.
- 5. Disable auto-lock during live view, remote playback and local playback.

- 6. Recover previous live view of all selected cameras after being stopped.
- 7. Slide the camera list downwards to refresh the device status during live view and remote playback mode.
- 8. Recover the remote playback after switching from the background.
- 9. Remember the previous register mode for adding new device.
- 10. Add serial No. scanning in HiDDNS register mode.
- 11. Display the name of the main menu button.
- 12. Add some hints about configuration or abnormal conditions, e.g., popping up "Please check your network connection." when the network is abnormal.

V 3.1

Added New Features:

- 1. Support audio control.
- 2. Support email feedback.
- 3. Support digital zoom.

V 3.0

Added New Features:

- 1. New designed GUI provides convenient operations.
- 2. iPhone5 is supported.
- 3. Up to 16-ch synchronous live view.
- 4. Support live view by page.
- 5. Support live viewing channel-zero.
- 6. Optimize the playing performance.
- 7. Display the quick operation guide and main features of the software.
- 8. Check new version automatically.
- 9. Image quality configurable during live view mode.
- 10. Alarm outputs control.
- 11. Password protection.

Modified:

- 1. Optimize PTZ control.
- 2. Delete the Alarm Management settings.
- 3. Delete the channel configuration.
- 4. Cancel the registration when logging in for the first time.

0404001060628

